

YC-RL.04.20A 4 CH 20A Relay Switch Module

Product Manual

Release: September 22, 2023

Version: V1.6



Figure 1, 4 CH 20A Relay Switch Module

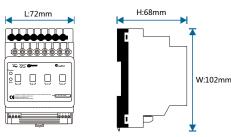


Figure 2. Dimensional Drawing - Front View Figure 3. Dimensional Drawing -Sideview


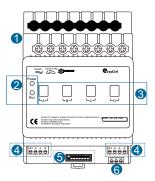


Figure 4. Product Information

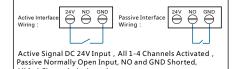

All 1-4 Channels Activated (When Exiting Fire Mode, all 1-4 Channels will turn off.)
Note: In Fire Mode, the software and manual buttons cannot operate the device

Figure 5. Fire Interface Description

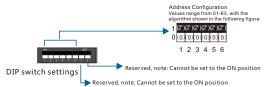


Figure 6. Address DIP Switch Table 1

Product Overview

The 4 CH 20A Relay Switch Module (see Figure 1) serves as a system switch execution unit, typically installed in a distribution box. It can control the switching of lights, the on/off state of devices, the on/off state of passive dry contacts, the opening and closing of strong or weak current curtains, the hot/cold valve of water-cooled air conditioning, and the switching between high/medium/low fan speeds.

Function Description

- Standard 35mm DIN rail installation: Occupies 4P module units.
- Equipped with Fanhua single contact magnetic latching relay, providing 4-channel 20A relay switching.
- Each circuit can independently control devices up to 4400W.
- Supports setting the initial power-on state for each circuit (on, off, or previous power state).
- Features sequential delay startup for multiple circuits to prevent power grid surges from simultaneous startup.
- Includes two interlock modes for controlling two sets of curtains.
- Includes one interlock mode for controlling the low, medium, and high-speed settings of two central air conditioners.
- Returns the actual switch status of each circuit to the monitoring center immediately after executing scene commands.
- Built-in mechanical forced cut-off switch function, allowing relay switching even during network failure or power outage.
- Includes a fire protection interface with one normally open passive and one active 24V connection.
- Supports online firmware updates and Bus network disconnection alarm function.
- Supports RS485/YC-BUS communication.

Precautions

- Use CAT5E or RVV4*0.75 four-core wire for bus wiring.
- After installation, check all connections to ensure they are correctly connected.
- The current for each output circuit must not exceed 20A.
- To protect the equipment and load, it is recommended to connect a 20A circuit breaker for each circuit.

Product Information

Product Dimensions: See Figures 2 and 3

Product Wiring: See Figure 8

Product Information: See Figure 4

- Relay Output Wiring Terminals: Use a one-in-one-out method; the hole diameter can accommodate 4 square mm wire.
- LED Indicators:
- Power: Power indicator light.
- Bus: Network indicator light; steady on indicates normal network connection, slow blinking indicates abnormal
- Function Keys:
- Forced Cut-off Switch (See Figure 13): A-D corresponds to channels 1-4. Use a small flathead screwdriver to toggle the switch up and down in the groove.
- Bus Interface: 24V, G, A, B.
- Setting Address:
- Step 1: (See Figure 8) Remove the latch cover; it requires some force to pull it out.
- Step 2: (See Figures 6-7) Refer to the address setting dip switch table to set the dip switch to the corresponding address.
- Step 3: After setting the address, remember to replace the latch cover.
- Fire Interface:
- Fire Center: Provides a normally closed signal to engage all 4 circuits; provides a normally open signal to disconnect all 4 circuits, with priority over software and manual control (see Figure 5).

Product Installation

See Figures 9-12

- Step 1. Secure the 35mm rail with screws.
- Step 2. Remove the snap-on cover from the 4 CH 20A Relay Switch Module.
- Step 3. Press the entire module onto the rail and slide it until it is in the correct position, then snap the cover into place.

Safety Warning 🗘

- Each relay circuit requires a suitable circuit breaker or fuse.
- Tightening torque should not exceed 0.4 Nm.
- Input power wire: Max 4mm²; Load wire: Max 1mm².
- Installation location: Distribution box.
- Do not connect the YC-BUS interface incorrectly, as it may damage the equipment.
- The YC-BUS interface must not be connected to AC power; otherwise, it will damage all devices on the bus.
- Ensure a good ventilation environment.
- Do not expose to rain, contact with other liquids, or corrosive gases.

Packing List

YC-RL.04.20A*1/User Manual*1/Certificate of Conformity*1

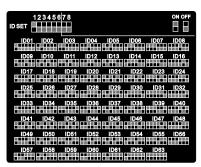


Figure 7. Address Dip Switch Table 2

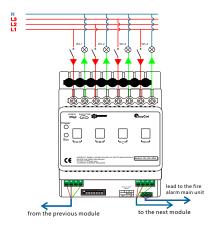


Figure 8. Product Wiring Diagram

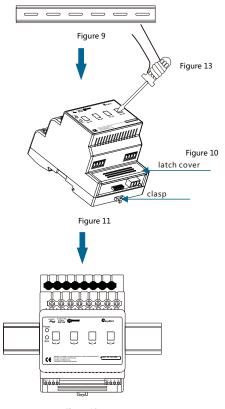


Figure 12

Figure 9-12.installation drawing


Technical support		
Service Hotline: 86-18029750069		
working hours: 9:00-12:00,13:00-18:00,From Monday to Friday)		
Email:adminl@easyctrl.com		
website: http://www.easyctrlgz.com		
2020 Guangzhou Easyctrl Intelligent Technology Co., Ltd. All rights reserved. This manual may be changed or updated without prior notice.		
This manual may be changed of appeared without prior notice		

Technical Parameters

Basic Parameters	
Operating Voltage	24VDC±10%
Maximum Power Consumption	≤3.2W
Rated Voltage	250/400VAC
Output Circuit	4-channel relay
Relay	Fanhua single-contact magnetic latching relays
Rated Current	20A (single channel),Surge current capability: 500A/2ms (single channel)
Switching Cycles	no-load: 1,000,000 cycles , load: 30,000 cycles
Protection	circuit breaker for each circuit
External Environment	
Operating Temperature	-5°C~45°C
Operating Relative Humidity	≤90%
Storage Temperature	-20°C~60°C
Storage Relative Humidity	≤93%
Product Specifications	
Dimensions (L*W*H)	72 mm*102 mm*68 mm
Net Weight	≤316 g/pcs
Enclosure Material	flame retardantPP
Installation Method	standard 35mm DIN rail mounting (see Figure 9-12)
Protection Level	IP20

System Diagram



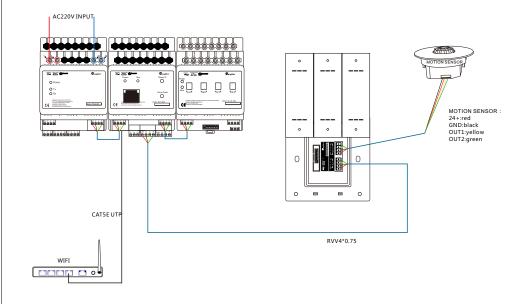

Bus Specification

Bus interface	4-core wire: RVV4*0.75	UTP : CAT5/CAT5E
24V	RED	BROWN WHITE/BROWN
GND	BLACK	BLUE WHITE/BLUE
Α	YELLOW	ORANGE WHITE/GREEN WHITE
В	GREEN	ORANGE/GREEN