

D8 series key panel

Product series	Product name	Product model
D8 series smart panel(plastic)	Smart 2-key panel	YC.KP.02C
	Smart 4-key panel	YC.KP.04C
	Smart 6-key panel	YC.KP.06C

Product Manual

Release : September 8, 2020

Version : V1.4



Figure 1.2 Key smart panel



Figure 2.4 Key smart panel



Figure 3.6 Key smart panel

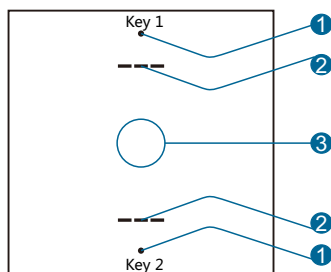


Figure 4.2 Key smart panel

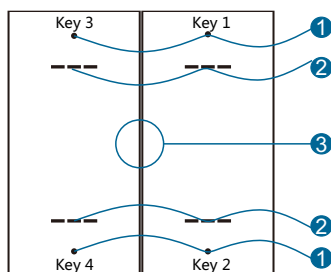


Figure 5.4 Key smart panel

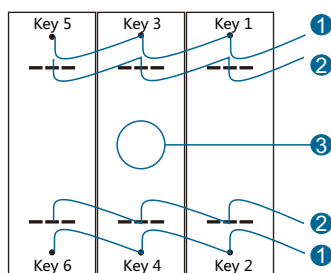


Figure 6.6 Key smart panel

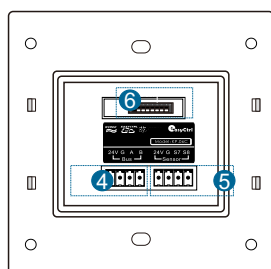


Figure 7. Back view

Product Overview

Smart 2/4/6 key panel(see Figure 1 - 4) , serves as a system control unit , typically installed in the local, to achieve single control or scene control of lighting switch, dimming, curtain opening and closing, music and other devices.

Function Description

- Standard 86 bottom box installation, support multiple panel seamless cascading.
- Panel appearance color, regular color black, gray, gold, other colors customized.
- Provide 2/4/6 programmable keys, ICONS can be carved or text screen printing.
- Can trigger short press, short press release, long press and long press release key to control lighting, curtains, scene functions, etc.
- Provide two remote dry node sensor input ports, with 24V power supply.
- The sensing interface is optocoupler isolation, high voltage overcurrent protection, with strong anti-interference and reliability.
- Comes with panel backlight to manually adjust function keys to adapt to different scenarios.
- With proximity sensing function, it will not be disturbed by the key background light in sleep mode
- Each key with background color LED and activation color LED, color can be customized.
- Supports online firmware updates and Bus network disconnection alarm function.
- Supports RS485/YC-BUS communication.

Precautions

- Use CAT5E or RVV4*0.75 four-core wire for bus wiring.
- Do not connect the AB signal of the bus interface incorrectly, otherwise the bus signal will be abnormal.
- After accessing the bus, the panel address cannot be found. Determine whether the address is duplicated. Dial 7 and 8 to be in the OFF position.

Product Information

Product Dimensions: See Figures 11 and 12
Installation opening size, see Figure 13 and 14

Product Information: See Figure 4 - 7

- The key, key indicator and bus are abnormal:
 - Key trigger : Trigger conditions, can be set by software, short press, release, long press, when binding dimming, short press for switch, long press for dimming.
 - Indicator light: indicator light can be switched, dimming, timing, grouping, binding to synchronous, reverse display, no synchronous state, set by software. The indicator is off by default, When the key is pressed, the current key indicator will flash for a while, and the backlight will also light up (the backlight will go out after 30s). Note: The color of key indicator is white.
 - Bus anomaly: When the bus is abnormal, the panel key indicator 1 will keep flashing. At this time, it is necessary to eliminate problems such as line problems and address duplication.
- Standby backlight setting and brightness
 - Brightness: backlight color is orange, the default is 0% brightness.
 - Standby backlight settings: Note: 2 key panel is key 1 and key2, 4, 6 key panel is key3 and key4. Example: 4-key and 6-key panels: Press key 3 and 4 at the same time, and the backlight will flash. Under, press key 4 to increase brightness, press key 3 to decrease brightness. After adjusting to the desired backlight standby effect, press button 3 and 4 again at the same time, and the backlight light flashes again. Note: this parameter can only be set by hardware, triggering the key 9.
- Proximity sensing button: comes with one manual touch sensing button, sensing distance 1cm.
- Bus interface: 24V, G, A, B, and other bus interface cascade, do not connect the wrong (see Figure 9).
- Dry contact interface: 24, G, P7, P8, trigger mode, G is the common end, G and S7 or S8 short contact to send IO signal, trigger signal can be short press, long press, release trigger mode. Note: S7 is the first dry input. S8 is the second dry contact input (see Figure 10), triggering key 7 and key 8.
- Address setting: the default address is 01, the address is set to 01-63 (decimal), using 6-bit dial, binary dial mode, setting mode (see Figure 8).

Product Installation

See Figures 15-17


- Step 1. Disassembly port, use a small knife to pry the gap of the disassembly port can be removed, 4 disassembly port, same as above.
- Step 2. Mounting port, mounting screw with M4*25, install to the appropriate position.
- Step 3. During installation, check whether the panel is installed in the wrong direction.
- Step 4. After installation, remove the key cover, align it with the hole, and install it properly.

Safety Warning

- Tightening torque should not exceed 0.4 Nm.
- Installation location: Wall or distribution box
- Do not connect the YC-BUS interface incorrectly, as it may damage the equipment.
- The YC-BUS interface must not be connected to AC power; otherwise, it will damage all devices on the bus.
- Ensure a good ventilation environment.
- Do not expose to rain, contact with other liquids, or corrosive gases.

Packing List

- Smart key panel*1/User Manual*1/Certificate of Conformity*1

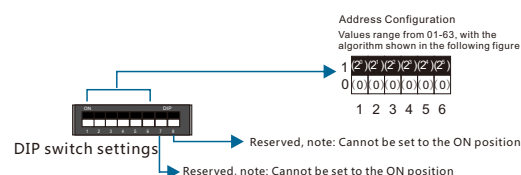

ID SET	1	2	3	4	5	6	7	8	ON	OFF
ID01										
ID02										
ID03										
ID04										
ID05										
ID06										
ID07										
ID08										
ID09										
ID10										
ID11										
ID12										
ID13										
ID14										
ID15										
ID16										
ID17										
ID18										
ID19										
ID20										
ID21										
ID22										
ID23										
ID24										
ID25										
ID26										
ID27										
ID28										
ID29										
ID30										
ID31										
ID32										
ID33										
ID34										
ID35										
ID36										
ID37										
ID38										
ID39										
ID40										
ID41										
ID42										
ID43										
ID44										
ID45										
ID46										
ID47										
ID48										
ID49										
ID50										
ID51										
ID52										
ID53										
ID54										
ID55										
ID56										
ID57										
ID58										
ID59										
ID60										
ID61										
ID62										
ID63										

Figure 8. Address DIP Switch Table

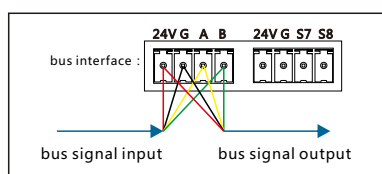


Figure 9. Description of bus interface wiring

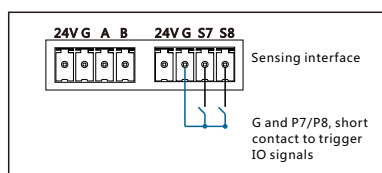


Figure 10. Sensing interface wiring diagram

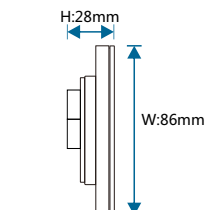
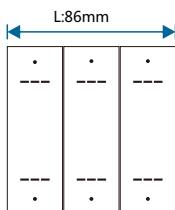


Figure 11. Dimensional Drawing - Front View Figure 12. Dimensional Drawing -Sideview

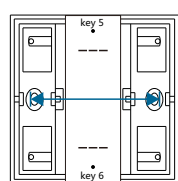


Figure 13.Installation hole position diagram

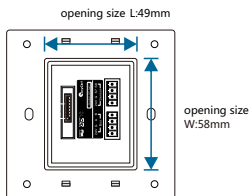


Figure 14. Opening size diagram

Remove the opening, forcefully break the gap of the key cover can be removed

Mounting port, mounting screw with M4*25

Installation direction, Follow the arrow direction of Figure 17

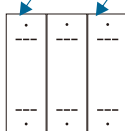


Figure 15. Remove port

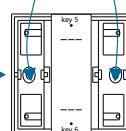


Figure 16. Mounting port


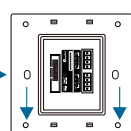


Figure 17. Mounting direction

Technical Parameters

Basic Parameters	
Operating Voltage	24VDC $\pm 5\%$
Rated Power Consumption	YC.KP.02C $\leq 0.4W$ YC.KP.04C $\leq 0.5W$ YC.KP.06C $\leq 0.5W$
Proximity Induction	induction interface *1
Number Of Keys	two/four/six keys
Key Category	reset touch key
Bus Interface	bus Interface*1
Sensing Interface	sensing interface*3
Protection	IP20
External Environment	
Operating Temperature	0°C~45°C
Operating Relative Humidity	$\leq 90\%$
Storage Temperature	-20°C~60°C
Storage Relative Humidity	$\leq 93\%$
Product Specifications	
Dimensions (L*W*H)	86mm*86mm*28mm
Net Weight	$\leq 74g$ pcs
Enclosure Material	plastic
Installation Method	standard 86 bottom box mounting (see Figure 15-17)
Opening Size (L * W)	49mm*58mm , bottom box depth is greater than 40mm(see Figure 13-14)
System Diagram	

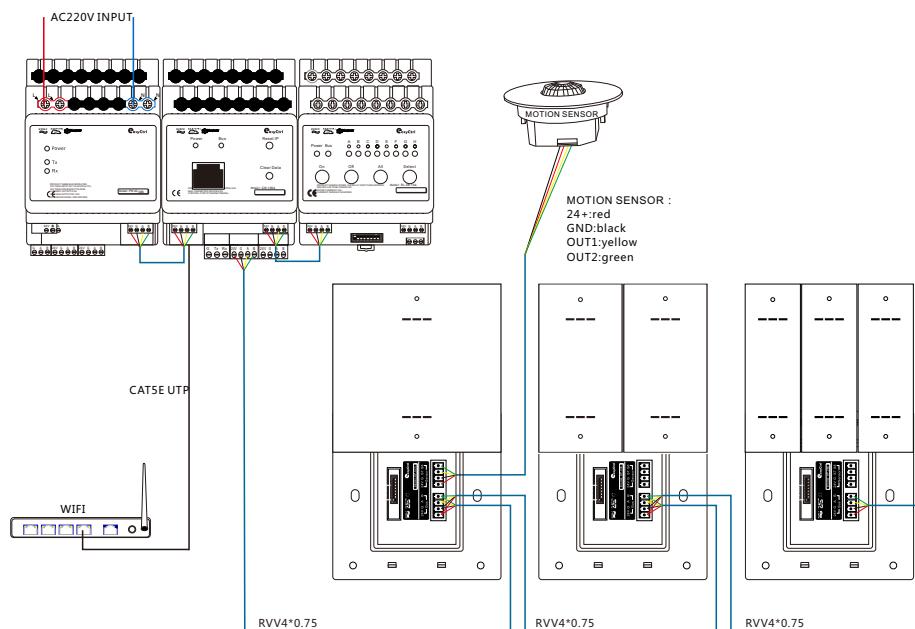

Bus Specification

Bus interface	4-core wire : RLV4*0.75	UTP : CAT5/CAT5E
24V	RED	BROWN WHITE/BROWN
GND	BLACK	BLUE WHITE/BLUE
A	YELLOW	ORANGE WHITE/GREEN WHITE
B	GREEN	ORANGE/GREEN

Technical support

Service Hotline: 86-18029750069

working hours: 9:00-12:00,13:00-18:00,From Monday to Friday)

Email:ceshi@easyctrlg.com

website: http://www.easyctrlg.com



2025 Guangzhou Easyctrl Intelligent Technology Co., Ltd. All rights reserved.
This manual may be changed or updated without prior notice.