

### M series key panel

Product series	Product name	Product model
M series smart panel(Metal cover, plastic shell)	4-key metal smart panel	YC.KP.04M
	6-key metal smart panel	YC.KP.06M


### **Product Manual**

Release : Oct 13, 2021 Version : V1 1






Firgue1.4-key metal smart panel Firgue2.6-key metal smart panel

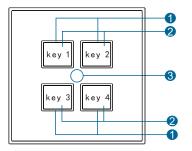

Firgue3.4-key metal smart panel

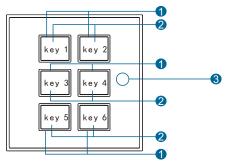

Firgue4.6-key metal smart panel

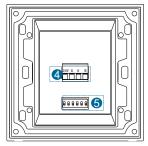


Figure 5. Back view

## **Product Overview**

4/6 key metal smart panel (see Figure 1-2), standard 86 bottom box installation, support seamless connection, can be matched with a variety of materials and colors of the panel, provide 4/6 key panel, reset type touch switch, mature structure, stable performance, high light process.

# **Function Description**

- Standard 86 bottom box installation, support multiple panel seamless cascading.
- Provide 2/4/6 programmable keys, ICONS can be carved or text screen printing.
- Can trigger short press, short press release, long press and long press release button to control lighting, curtains, scene functions, etc.
- Comes with panel backlight to manually adjust function keys to adapt to dif
- Each key with background color LED and activation color LED, color can be customized.
- Supports online firmware updates and Bus network disconnection alarm function.
- Supports RS485/YC-BUS communication.

# **Precautions**

- Use CAT5E or RVV4\*0.75 four-core wire for bus wiring.
- Do not connect the AB signal of the bus interface incorrectly, otherwise the bus signal will be abnormal.
- After accessing the bus, the panel address cannot be found. Determine whether the address is duplicated.
   Dial 7 and 8 to be in the OFF position.

## **Product Information**

Product Dimensions: See Figures 8 and 9
Installation opening size, see Figure 10 and 11
Product Information: See Figure 3-5

- Key trigger: Trigger conditions, can be set by software, short press, release, long press, when binding dimming, short press for switch, long press for dimming.
- Indicator light: indicator light can be switched, dimming, timing, grouping, binding to synchronous, reverse display, no synchronous state, set by software. The indicator is off by default, When the key is pressed, the current key indicator will flash for a while, and the backlight will also light up (the backlight will go out after 30s). Note: The color of key indicator is white.
- Bus anomaly: When the bus is abnormal, the panel key indicator 1 will keep flashing. At this time, it is
  necessary to eliminate problems such as line problems and address duplication.
- 2. Standby backlight setting and brightness
- Brightness: backlight color is orange, the default is 50% brightness.
- Standby backlight Settings: Note: 4/6 key panel is key3 and key4.
- Example: 4-key and 6-key panels: Press key 3 and 4 at the same time, and the backlight will flashUnder, press key 4 to increase brightness, press key 3 to decrease brightness. After adjusting to the desired backlight standby effect, press button 3 and 4 again at the same time, and the backlight light flashes again. Note: this parameter can only be set by hardware, triggering the key 9.
- 3. Bus interface: 24V, G, A, B, and other bus interface cascade, do not connect the wrong (see Figure 7).
- 4. Address setting: the default address is 01, the address is set to 01-63 (decimal), using 6-bit dial, binary dial mode, setting mode (see Figure 6).

# **Product Installation**

See Figures 12


- Step 1. Disassembly port, use a small knife to pry the gap of the disassembly port can be removed,
   4 disassembly port, same as above.
- Step 2. Mounting port, mounting screw with M4\*25, install to the appropriate position.
- Step 3. During installation, check whether the panel is installed in the wrong direction.
- Step 4. After installation, remove the key cover, align it with the hole, and install it properly.

# Safety Warning 🗘

- Tightening torque should not exceed 0.4 Nm.
- Installation location:Wall or distribution box
- Do not connect the YC-BUS interface incorrectly, as it may damage the equipment.
- The YC-BUS interface must not be connected to AC power; otherwise, it will damage all devices on the bus.
- Ensure a good ventilation environment.
- Do not expose to rain, contact with other liquids, or corrosive gases.

# **Packing List**

• Smart key panel\*1/User Manual\*1/Certificate of Conformity\*1

 

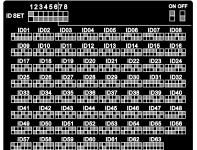


Figure 6. Address DIP Switch Table

 


Figure 7. Description of bus interface wiring


 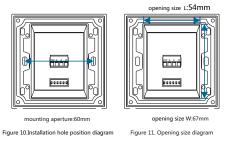


Figure 8. Dimensional Drawing - Front View Figure 9. Dimensional Drawing - Sideview



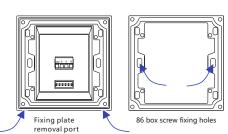


Figure 12. Disassembly and installation


# Technical support Service Hotline: 86-18029750069 working hours: 9:00-12:00,13:00-18:00,From Monday to Friday) Email:ceshi@easyctrlgz.com website: http://www.easyctrlgz.com 2025 Guangzhou Easyctrl Intelligent Technology Co., Ltd. All rights reserved. This manual may be changed or updated without prior notice.

# **Technical Parameters**

Basic Parameters	
Operating Voltage	24VDC±10%
Maximum Power Consumption	YC.KP.04M ≤1W YC.KP.06M ≤1.1W
Number Of Keys	four/six keys
key Category	reset touch key
Key Indicator Light	white light
Backlight	orange light
Bus Interface	bus interface*1
Protection	IP20
<b>External Environment</b>	
Operating Temperature	0℃~45℃
Operating Relative Humidity	20% ~ 93% RH
Storage Temperature	-20℃~55℃
Storage Relative Humidity	10% ~ 93% RH
<b>Product Specifications</b>	
Dimensions ( L*W*H )	85.6mm*85.6mm*30mm
Net Weight	YC.KP.04M ≤145g/pcs YC.KP.06M ≤150g/pcs
Enclosure Material	metal cover, plastic casing
Installation Method	standard 86 bottom box mounting(see Figure 12)
Opening Size (L * W)	54mm*67mm , bottom box depth is greater than 40mm
System Diagram	

# **System Diagram**



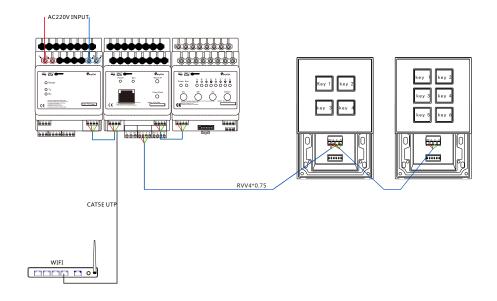

# **Bus Specification**

Bus interface	4-core wire: RVV4*0.75	UTP : CAT5/CAT5E
24V	RED	BROWN WHITE/BROWN
GND	BLACK	BLUE WHITE/BLUE
Α	YELLOW	ORANGE WHITE/GREEN WHITE
В	GREEN	ORANGE/GREEN