



YC-MI.08B
8 CH Dry Contact Module

Product Manual

Release : May 12, 2025
Version : V1.4



Figure 1. 8 CH Dry Contact Module

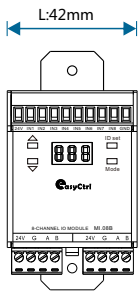


Figure 2. Dimensional Drawing - Front View

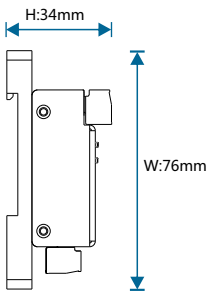


Figure 3. Dimensional Drawing -Sideview

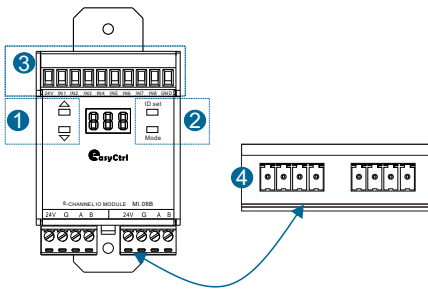


Figure 4. Product Information

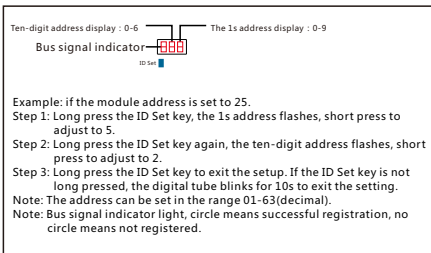


Figure 5. Address setup instructions

Product Overview

8 CH Dry Contact Module (see Figure 1), serves as a system control unit, typically installed in a distribution box, with DIN rail installation. It occupies 2.5P module units and provides 8-channel dry contact sensor inputs. Compatible with reset panels or self-locking panels, it can connect to various dry contact output sensors such as motion sensors, radar sensors, and light sensing modules.

Function Description

- Standard 35mm DIN rail installation: Occupies 2.5P module units.
- Phoenix terminal interface, stable and reliable, easy to connect
- Provide 8 channels switching input, 24V voltage output
- Can connect dry contact sensor, dry contact panel, etc
- Support YC-BUS communication.

Precautions

- Use CAT5E or RVV4*0.75 four-core wire for bus wiring.
- Do not connect signals of bus interfaces A and B incorrectly; otherwise, bus signals will be abnormal.
- IN1-IN8 channel dry contact input, do not exceed 30V; otherwise, the device will be burned.

Product Information

Product Dimensions: See Figures 2 and 3

Product Wiring: See Figure 6 and 7

Product Information: See Figure 4

1. Function key : Reserved keys
2. Function key :
 - ID Set key : Address setting 01-63, setting method (see Figure 5)
 - Mode key : Reserved keys
3. Terminal Blocks: inputs IN1-IN8 , 24V is the common terminal (common anode) 24V, GND output voltage, (see Figure 6)
4. Bus interface (see Figure 8) :
 - Bus interface sequence : 24V, GNG, A, B

Product Installation

See Figures 9-11

- Step 1. Secure the 35mm rail with screws.
- Step 2. Hold the 8 CH Dry Contact Module at a 45 degree angle with both hands, and the bottom of the module is clamped against the guide rail. The whole module is pressed to the guide rail at a 90 degree angle, and the module is slid until it is in the correct position.

Safety Warning

- Tightening torque should not exceed 0.4 Nm.
- Installation location: Distribution box./86 bottom box
- Do not connect the YC-BUS interface incorrectly, as it may damage the equipment.
- The YC-BUS interface must not be connected to AC power; otherwise, it will damage all devices on the bus.
- Ensure a good ventilation environment.
- Do not expose to rain, contact with other liquids, or corrosive gases.

Packing List

- YC-MI.08B*1/User Manual*1/Certificate of Conformity*1

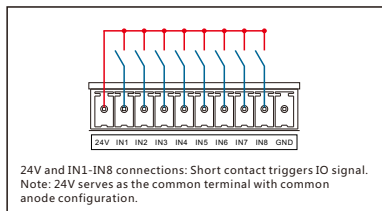


Figure 6. Dry Contact Wiring Diagram

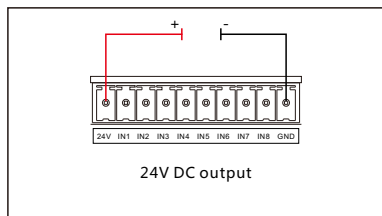


Figure 7. Dry contact output voltage connection

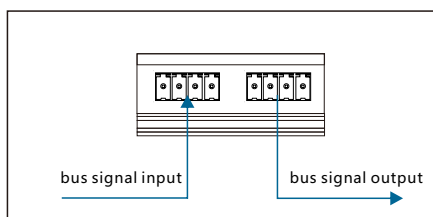


Figure 8. Bus Interface Wiring Diagram



Figure 9



Figure 10

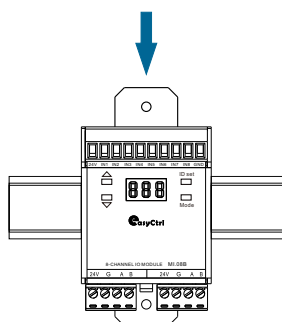


Figure 11

Technical Parameters

Basic Parameters

Operating Voltage	24VDC \pm 10%
Rated Power Consumption	\leq 0.4W
Output Voltage	24VDC \pm 10%
Dry Contact Input	8 channels
Load Contact	28V
Bus Interface	bus interface*2
Display Interface	4* light touch function key; 3* digital tube LED light
Protection	NONE

External Environment

Operating Temperature	0°C~70°C
Operating Relative Humidity	20%~93%
Storage Temperature	-40°C~55°C
Storage Relative Humidity	10%~93%

Product Specifications

Dimensions (L*W*H)	42mm*76mm*32mm
Net Weight	\leq 104 g/pcs
Installation Method	standard 35mm DIN rail mounting (see Figure 9-11)
Protection Level	NONE


System Diagram



Notebook



Mobile terminal
(IOS/Android)

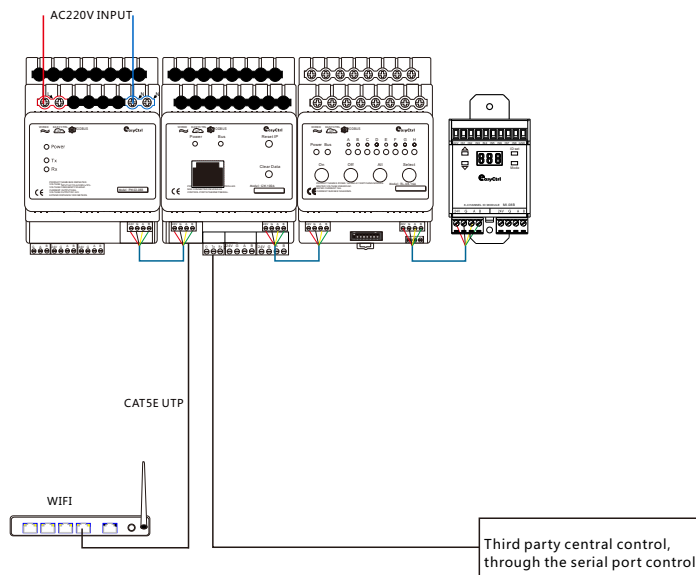

Technical support

Service Hotline: 86-18029750069

working hours: 9:00-12:00,13:00-18:00,From Monday to Friday)

Email:ceshi@easyctrlgz.com

website: <http://www.easyctrlgz.com>



2025 Guangzhou Easyctrl Intelligent Technology Co., Ltd. All rights reserved.
This manual may be changed or updated without prior notice.